

HEPA FILTER INSTALLATION

applies to X24 HRV ECM, G2400H ECM, HRV200 ECM, X30 HRV ECM, G3000H ECM, HRV250 ECM, X30 ERV ECM, G3000E ECM and ERV250 ECM units.


CAUTION

Be careful not to damage the HEPA filter if using sharp tool to remove it from its bag.

- ① Remove the HEPA filter from its bag.
- ② Write the installation date on the HEPA filter frame for future reference (see inset on illustration below).
- ③ Unplug the unit, open its door and slide the HEPA filter in the unit, at the location show on illustration below.
NOTE: Ensure the arrow on filter frame is pointing up.
- ④ Close the unit door and plug back the unit.
NOTE: The unit will return to its previous setting after a 30-second delay for booting sequence.
- ⑤ When this is the first time this HEPA filter is installed (not a replacement), the unit needs to be balanced, because this filter adds ± 0.3 in. w.g. static pressure. Follow the steps from the installer manual, Section 7 (Balancing the unit) **but use the appropriate balancing chart according to your unit model (see below and on back page)**.

NOTE: Balancing must be performed by an installer.

Replace the HEPA filter after 12 months (mostly for continuous mode and recirculation usage) or 18 months (if Intermittent mode is used during Winter and Summer).

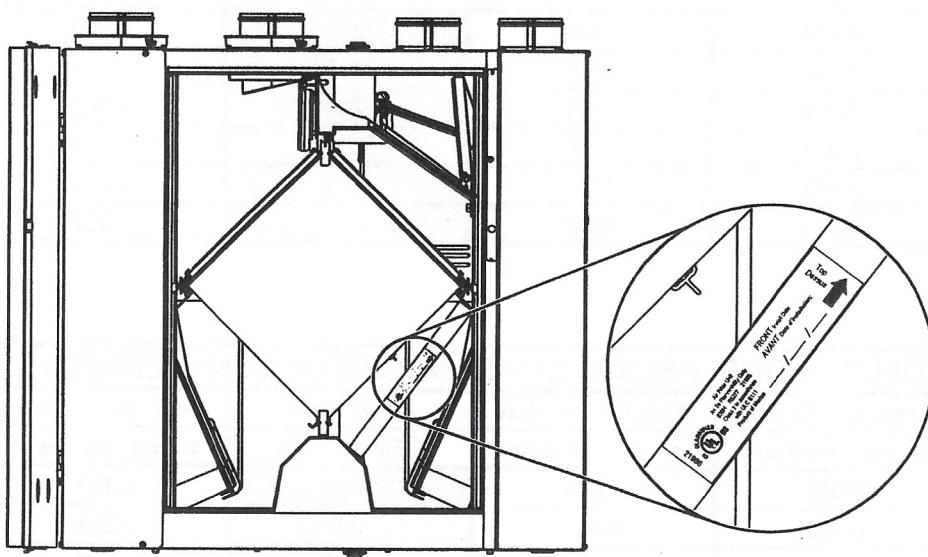

MODELS / MODÈLES: X24 HRV ECM, G2400H ECM & HRV200 ECM

Flow / Débit	Fresh air / Air frais	Stale Air / Air Vicié	Flow / Débit	Fresh air / Air frais	Stale Air / Air Vicié
CFM / pi³/min	in. w.g. / po d'eau	in. w.g. / po d'eau	CFM / pi³/min	in. w.g. / po d'eau	in. w.g. / po d'eau
50	0.111	0.045	160	0.357	0.141
55	0.122	0.049	165	0.368	0.146
60	0.133	0.054	170	0.380	0.150
65	0.144	0.058	175	0.391	0.154
70	0.155	0.063	180	0.402	0.159
75	0.166	0.067	185	0.414	0.163
80	0.177	0.071	190	0.425	0.167
85	0.188	0.076	195	0.437	0.172
90	0.200	0.080	200	0.448	0.176
95	0.211	0.085	205	0.459	0.180
100	0.222	0.089	210	0.471	0.185
105	0.233	0.093	215	0.482	0.189
110	0.244	0.098	220	0.494	0.193
115	0.256	0.102	225	0.505	0.197