

CLEANING OR REPLACING INSTRUCTIONS



Filter Replacement Kit HRV/ERV

- PH7.15 / PH7.15ES / PE7.15 / XPH1.5 / XDH7.15 / RNC1.5 / DH7.15 / SH0.8 / SHM0.8 / AIREMAID1500
- PH10.22 / PH10.20ES / XPH2.0 / RNC2.0 / RNC2.0ES / SH0.12 / SHM0.12 / DH10.22
- C3.14HRV / RNC1.0 / RNC12
- SS3.80HRV / SS3.80ERV
- SS3.12FSD / SS3.12DD / AIREMAID1200

READ AND SAVE THESE INSTRUCTIONS

Read all instructions and WARNINGS carefully before beginning.

WARNING: Risk of electrical shocks. Before servicing or cleaning the HRV/ERV system, always disconnect the unit from its power source.

- Four times a year or as needed, vacuum the filters.
- Replace the filters once a year.

STEP 1

Disconnect the power supply.

STEP 2


Unlatch the door panel.

STEP 3

Remove door panel by sliding it off the hinges.

STEP 4

Remove the filters and vacuum.
(Skip this step if you are replacing the filters.)

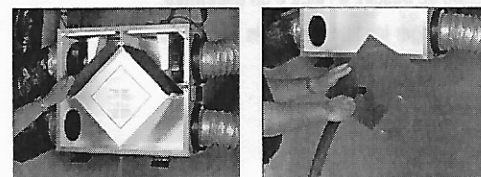

STEP 5


HRV MODEL: Once a year or as needed, slide out the heat recovery core. Vacuum the four surfaces, let soak in warm water for 15 minutes, then spray rinse and let dry.

ERV MODEL: Once a year or as needed, slide out the heat recovery core. Vacuum the four surfaces, let soak in warm water for 15 minutes, then spray rinse and let dry.



STEP 6

Once a year or as needed, clean the interior of the unit (walls and drain pan) with a mild non-abrasive soap. It is recommended to use products that are environmentally friendly.

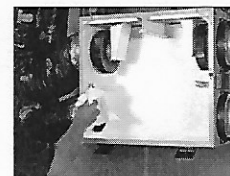

STEP 7:

Replace Core.

STEP 8:

Replace and dispose of the old filters in accordance to your municipal guidelines.

STEP 9:

Reinstall and latch door panel.

STEP 10:

Connect the power supply.



Greentek
50 Kanalfakt Way,
Bouctouche, NB Canada E4S 3M5

Toll free: 1 888 724-5211

Fax: 1 (866) 426-7430

Visit us at: www.greentek.ca