


# INSTRUCTION SHEET


SUBJECT: BLOWER ASSEMBLY REPLACEMENT.

- 1 Unplug the unit.

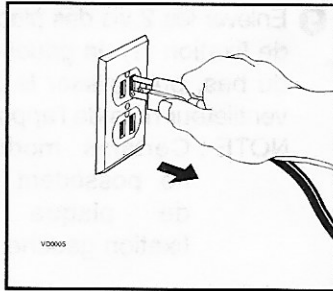


- 5 Remove the 2 screws on the bottom and left retaining brackets (1), then slide out the blower assembly from the unit.

NOTE: Some models do not have left retaining bracket.

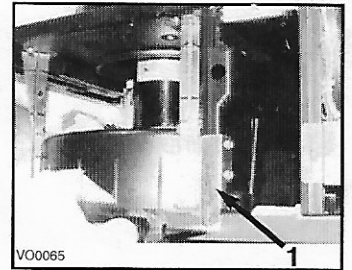


- 2 Open the door and remove the filter (1) to access the damper rods.

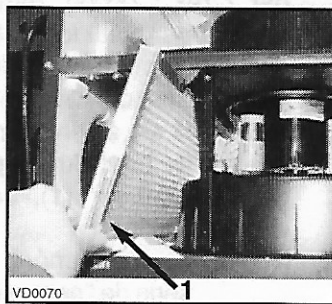


- 6 ONLY if the serial number of the unit starts with 7 (e.g.:7xxxx), replace the lower left damper rod by the one included in this kit. If the rubber grommet (A) is damaged, replace by the new one included in this kit. Start removing by the damper motor bracket end (1).

NOTE: If the serial number of the unit do not start with 7, do not use the new damper rod included in this kit.

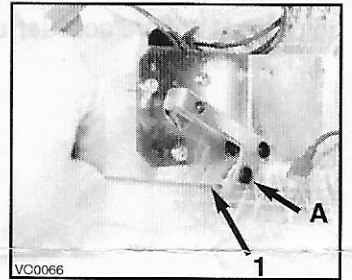


- 3 Disengage the upper damper rod (1) from the damper motor bracket (2).

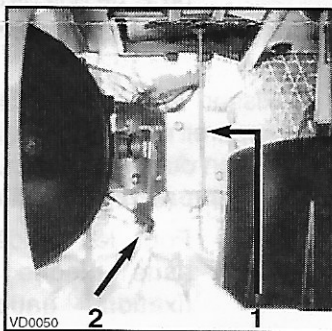


- 7 Slide the new blower assembly into the unit and secure it by screwing its left and bottom brackets (from now on included in this kit to be installed).

NOTE: For models without left retaining bracket, use the new left retaining bracket as a template and drill a 1/8" hole (1) on the left flange of the unit.

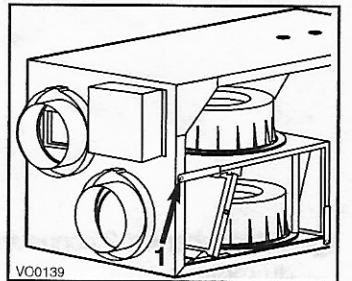

- 4 Unplug both motor connectors. NOTE: Be careful not to unplug the wires from their corresponding connectors.

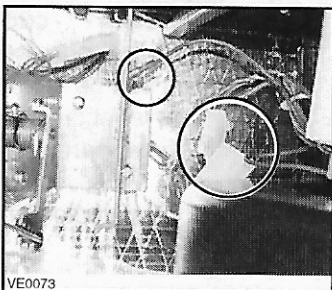

- 8 Complete the installation by reversing operations 4 to 1.

## CAUTION

Once the blower assembly replacement done, the unit's air flows must be rebalanced.




7 72371 04980 2

03573 rev. 4


# FEUILLE D'INSTRUCTION

OBJET : REMPLACEMENT DU BLOC VENTILATEUR.


- ① Débrancher l'appareil.

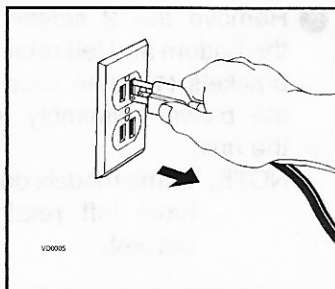

- ⑤ Enlever les 2 vis des plaques de fixation (1) de gauche et du bas, puis glisser le bloc ventilateur hors de l'appareil.  
NOTE : Certains modèles ne possèdent pas de plaque de fixation gauche.

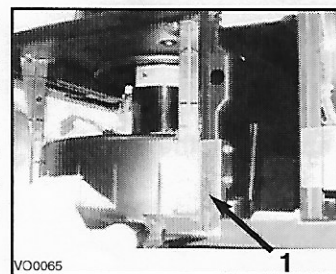


- ② Ouvrir la porte et retirer le filtre (1) afin d'accéder aux tiges de volet.

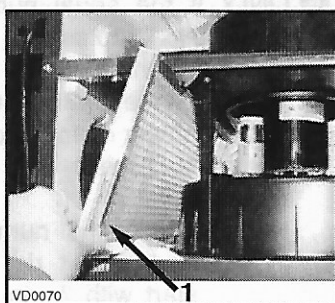


- ⑥ SEULEMENT si le numéro de série de l'appareil commence par 7 (ex : 7xxxx), remplacer la tige du volet inférieur gauche par celui fourni avec cet ensemble. Si l'œillet de caoutchouc (A) est endommagé, le remplacer par celui fourni dans cet ensemble. Commencer à enlever la tige par le bout du support de servomoteur (1). Jeter cette vieille tige.

NOTE : Si le numéro de série de l'appareil ne commence pas par un 7, ne pas utiliser la nouvelle tige.

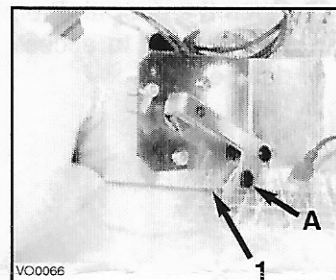


- ③ Décrocher la tige du volet supérieur (1) du support de servomoteur (2).

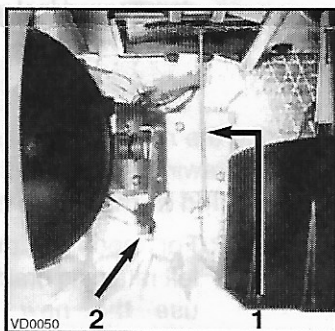


- ⑦ Glisser le nouveau bloc ventilateur à l'intérieur de l'appareil et le fixer à l'appareil en vissant ses plaques de fixation du bas et de gauche (désormais fournies avec le nouveau bloc ventilateur pour être installées).

NOTE : Pour les modèles sans plaque de fixation gauche, utiliser la nouvelle plaque de fixation gauche comme gabarit puis percer un trou de 1/8 po (1) sur le rebord gauche de l'appareil.

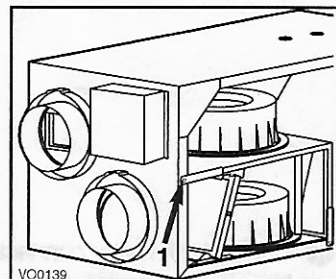

- ④ Débrancher les 2 connecteurs du moteur.

NOTE : Prendre soin de ne pas retirer les fils de leurs connecteurs correspondants.

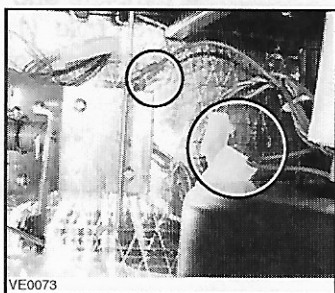

- ⑧ Finaliser l'installation en inversant les étapes 4 à 1.

## ATTENTION

Une fois le remplacement du bloc ventilateur effectué, les débits d'air de l'appareil doivent être rebalancés.

