


**INSTRUCTION SHEET**  
**SUBJECT: RECIRCULATION DAMPER WITH**  
**THERMISTOR/ SEPARATOR (WE) WITH**  
**THERMISTOR REPLACEMENT**  
**(PART NO. SV66148/SV66149)**

**⚠ WARNING**


**It is recommended to wear safety glasses and gloves while performing these instructions.**

① Turn the unit OFF using wall control. Unplug the unit.

② Remove terminal blocks by pulling them down. Remove electrical compartment cover by unscrewing the two screws. Remove the wires grommet by pulling it out. Set aside the terminal blocks, the cover, the screws and the grommet.

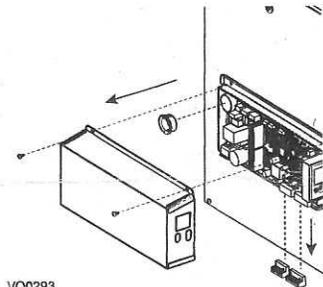


VO0293

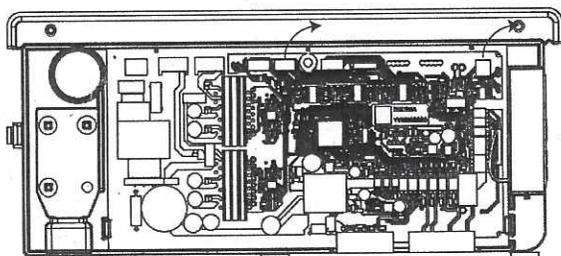

VD0510

③ Disconnect recirculation damper connector (if required) and thermistor connector from control board as illustrated above.

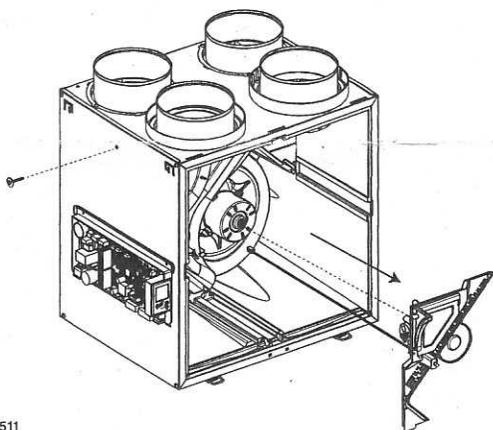


VD0511

④ Unscrew lateral screw. Pull out recirculation system or separator (for exhaust defrost models only).

⑤ Finalize the installation by reversing steps ④ to ①.

**NOTE:** If reinstalling the recirculation system, make sure to pass wire in the channel as illustrated hereafter. Also, the tie wrap must be positioned where indicated by the arrow.

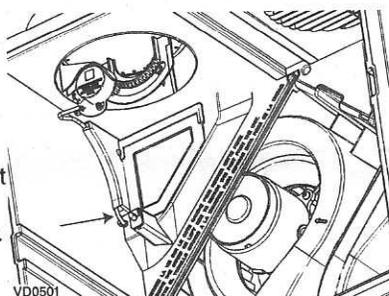

VD0501

**NOTE:** When reinstalling the electrical compartment cover, make sure to insert tabs in corresponding slots then screw the cover.


**FEUILLE D'INSTRUCTION**  
**OBJET : REMPLACEMENT**  
**VOLET RECIRCULATION AVEC THERMISTOR/**  
**SÉPARATEUR (WE) AVEC THERMISTOR**  
**(PIÈCE N° SV66148/SV66149)**

**⚠ AVERTISSEMENT**


**Il est recommandé de porter des lunettes et des gants de sécurité lors de l'exécution de ces directives.**

① Arrêter le fonctionnement de l'appareil à l'aide de la commande murale. Débrancher l'appareil.

② Enlever les borniers en les tirant vers le bas. Enlever le couvercle du compartiment électrique en dévissant les deux vis. Enlever le passe-fil en tirant sur celui-ci. Mettre les borniers, le couvercle, les vis et le passe-fil de côté.

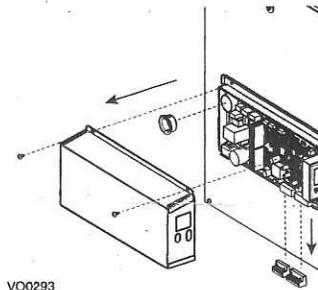


VO0293

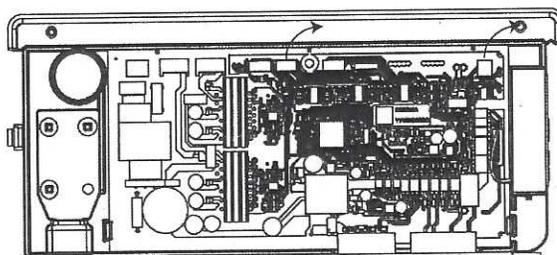

VD0510

③ Déconnecter le connecteur du volet de recirculation (si requis) et le connecteur du thermistor de la carte électronique, tel qu'illustré ci-dessus.

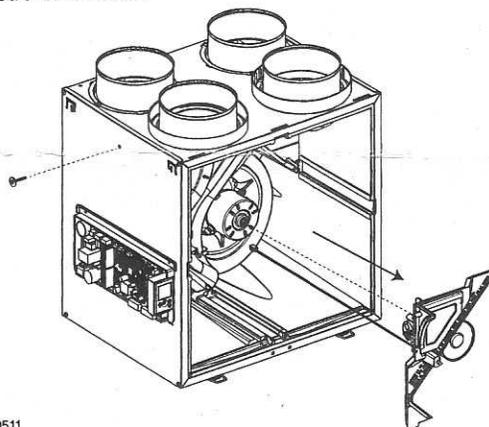


VD0511

④ Dévisser la vis latérale. Enlever le système de recirculation ou le séparateur (pour les modèles à dégivrage par évacuation seulement).

⑤ Finaliser l'installation en inversant les étapes ④ à ①.

**NOTE:** Si le système de recirculation est réinstallé, s'assurer de faire passer le fil dans la rainure tel qu'illustré ci-contre. De plus, l'attache autobloquante doit être positionnée à l'endroit indiqué par la flèche.

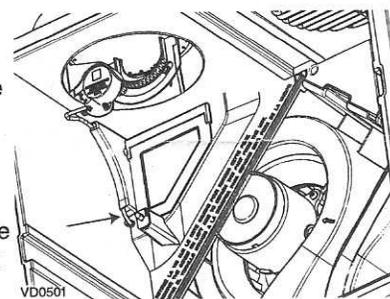

VD0501

**NOTE:** Lors de la réinstallation du couvercle du compartiment électrique, s'assurer d'insérer les pattes dans les fentes correspondantes puis visser le couvercle.